



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [TCL 27R83U](#) o cerca il tuo prodotto tra le [migliori offerte di Monitor](#)



The Creative Life

User manual

Manuel de l'utilisateur

Bedienungsanleitung

Manuale dell'utente

Manual de utilizador

Manual del usuario

Felhasználói kézikönyv

Podręcznik użytkownika

Brakerhåndbok

Інструкція з експлуатації

取扱説明書

사용설명서

Gebruikershandleiding

Návod k obsluze

Návod na používanie

Kullanım kılavuzu

Käyttöopas

Brakerhåndbok

Brugervejledning

Εγχειρίδιο χρήστη

Manual de utilizare

Руководство пользователя

دليل المستخدم

Manual pengguna



www.tcl.com



TCL Home App
Your TCL Smart Hub.
Download Now !

Table of Contents

Important Information	3	Using the Monitor	16
Important Safety Instructions	3	Connections	16
Using Electrical Power	5	Connect to the monitor	16
Advice on Eye Health	5	Monitor terminal description	17
Cleaning Your Monitor	5	Joystick Button	18
 Product Disposal and Recycle ...	6	Function description.....	18
Information of Your Old Product	6	OSD function menu	20
 Preparing and Assemble	7	Specification	26
What's in the Box	8	General specification	26
Installing the Monitor	9	Standard signal mode	28
Setup stand&base	9	 Other Information	30
Connect to power and turn on monitor	11	Troubleshooting	30
Adjusting viewing angle	12	Legal Statement	31
Wall mounting	14		

Important Information

Important Safety Instructions

Ensure you carefully read all the safety information before you setup this product.

TCL King Electrical Appliances (Huizhou) Co., Ltd. bears no responsibility for accidents or damages caused by unauthorized changes, modifications or improper use of the product.

Warnings

- **WARNING:** Keep away from water sources or water places such as bathrooms, kitchens, basements, swimming pools, etc.
- **WARNING:** Ensure that the equipment is mounted and placed in a stable place, if it falls, it may cause personal injury or equipment damage.
- **WARNING:** Keep away from sources of radiation and heat, please store and use in a cool, dry and ventilated place.
- **WARNING:** Do not cover or block the ventilation holes in the back case, and do not use it on the surface of a bed, sofa, blanket or similar object.
- **WARNING:** Do not overload the outlet as this may cause fire or electric shock.
- **WARNING:** Do not put foreign objects into the machine, otherwise it may cause a short circuit and lead to fire or electric shock.
- **WARNING:** Do not disassemble or repair this product by yourself. If there is any trouble, please contact the after-sales service personnel directly.
- **WARNING:** Do not pull or twist the power cord excessively.

- **WARNING:** The power supply voltage range for operation of the unit is indicated on the rear case label. If you are unable to confirm the voltage supplied, consult your dealer or local power company.
- **WARNING:** When the equipment is not used for a long period of time, disconnect the power supply to prevent damage from electric shock and abnormal power supply voltage during thunderstorms.
- **WARNING:** Sockets should be mounted near the equipment and should be easily accessible.
- **WARNING:** Sockets should be mounted near the equipment and should be easily accessible.
- **WARNING:** The power plug or appliance coupler serves as the disconnecting device, make sure that the disconnecting device is easily accessible during normal use of the equipment.




If your equipment uses an AC adapter:

- Only use the AC Adapter provided with your TCL product.
- Do not use the power cord with other products.

Ensure that the power outlet is as close as possible to the monitor and that it is easy to plug in and unplug the power adapter (power cord).

Always unplug the power adapter (power cord) from the power outlet when you disconnect the device.

Important Safety Instructions

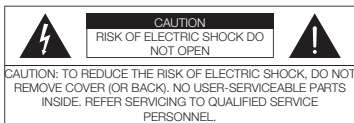

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This symbol indicates that the fuse may be in the neutral, and that the mains shall be disconnected to de-energize the phase conductors.

To prevent injury, this apparatus must be securely attached to the desk/floor/wall in accordance with the installation instructions.

Monitor screen

The monitor screen used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects.

The monitor screen is a very high technology product, giving you finely detailed pictures. Occasionally, a few nonactive pixels may appear on the screen as a fixed point of blue, green or red. This does not affect the performance of your product.

ESD regulation

This apparatus meets ESD performance criteria. In case the apparatus does not recover due to electrostatic discharge, user intervention is required.

Hanging the monitor on the wall

Warning: This operation requires at least two people depending on your monitor dimension.

To ensure a safe installation, observe the following safety notes:

- Check that the wall can support the weight of the monitor and wall mount assembly.
- Follow the mounting instructions provided with the wall mount. For certain models, make sure to screw the hexagonal VESA wall mounting screw bosses (and screws) provided with the set into the nuts for the wall mount at the back of your set before your wall mounting.
- The monitor must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the monitor cables are placed so that there is no danger of tripping over them.

All other safety instructions about our monitor are also applicable here.

Multi product user manual

The features described in this manual are common to most models. Some features may not be available on your monitor and/or your monitor may include features that are not described in this user manual. The illustrations in this manual may differ from the actual product. Please refer to the actual product.

Using Electrical Power

This product should be used with the type of power supply specified on the label. If you are uncertain about the type of power supply available, check with your dealer or local power supply company.

Warning

- Do not place any objects on the power adapter (power cord), and do not place this product where people will step on the power adapter (power cord).
- If a power extension cord is used, make sure that the total amperage of the appliances connected to it does not exceed the amperage of the power extension cord. Care should also be taken that the total rating of all appliances plugged into the same wall outlet does not exceed the fuse rating. (Applies to monitors equipped with power cords).
- Do not plug in too many devices, as this will cause overloading of the power outlets and power boards. The overall system load must not exceed 80% of the branch circuit rating. If a patch panel is used, the load must not exceed 80% of the patch panel input rating.

Advice on Eye Health

To avoid the possible eye fatigue and pains in the neck/arms/back/shoulders caused by long-time use of the Monitor, please keep the following suggestions in mind while using:

- Place the Monitor at a distance of 20~28 inches (approximately 50~70 cm) from your eyes.
- When using the Monitor, increase the blinking frequency appropriately to keep your eyes moist, and use water to moisten your eyes after long-time use of the Monitor.
- After using the Monitor for two hours, take a 20-minute break.
- Take frequent breaks: keep your eyes away from the Monitor and look at a distant target for at least 20 seconds.
- During breaks, stretching activities may be performed to soothe the neck, arms, back and shoulders.

Cleaning Your Monitor

Please carefully follow the guideline below when cleaning your monitor:

- Before cleaning the product, ALWAYS make sure disconnect the power cord.
- When cleaning, use a soft cotton or a microfiber cloth and mild detergent to clean the product. ALWAYS make sure the cloth be damp or almost dry, do not allow liquid into the cabinet front and side.

Product Disposal and Recycle

Information of Disposal of Old Product

Your product is designed and manufactured with high quality materials and components, which can be recycle and reused. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal to recycling information, please contact your local authorities.



WEEE Statement **[European Union]**

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obliged to take back such at the end of their useful life.

[Business users]

If you wish to dispose of this product, please contact your supplier and check the terms and conditions of the purchase contract.

[Other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to dispose of these items, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical equipment.



Conformity

This device complies with the requirement set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/65/EU). This product has been tested and found to comply with the harmonized standard for Information Technology Equipment published under Directive of Official Journal of the European Union.

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Preparing and Assemble







Warning

Before take out and assemble the monitor, please read carefully read this:

- Always use genuine components supplied from the box to ensure safety and product performance.
- For the damage or injury by unauthorized components, the product warranty will not cover.
- Generic cables not certified by TCL, display or image noises on the screen may occur.
- Illustration in this user manual represent typical procedures, it may have differences among varying monitors
- Do not use excessive force to tighten screws, otherwise damage may caused to the monitor. Such damage will not be covered by the product warranty.
- Fall-off or personal injury may happened if you only holding the base upside down. Such damage will not be covered by the product warranty.
- Do not apply excessive force to the screen when lifting or moving the monitor, damage may caused to the screen if so.
- Negligence, lack of supervision, lack of maintenance or maintenance of the Product not in accordance with the manufacturer's instructions for use are not covered by the product warranty.
- Modifications, adaptations and alterations of the monitor for use in a country different from those for which it was originally designed and manufactured and any deterioration caused by these modifications are not covered by the product warranty.
- Modifications, adaptations, interventions and alterations of the monitor (opened or disassembled), carried out by a third party, by an enterprise not authorized by the manufacturer or by an individual. Such changes are not covered by the product warranty.
- Maintenance and repairs made or attempted by persons other than the manufacturer or a service center approved by the manufacturer are not covered by the product warranty.
- An installation or use of the monitor that does not conform to the technical or safety standards and regulations in force in the country where it is installed and used are not cover by the product warranty.
- Virus infections or monitor use with software not provided or incorrectly installed are not covered by the product warranty.
- To aesthetic defects, especially scratches, traces of shocks etc. caused to external parts of the monitor that do not interfere with its operation are not covered by product warranty.
- Defects caused by infestation with parasites or insects are not covered by product warranty.

What's in the Box


Please check the following items when you unpack the box, and keep the package in case you need to transport or ship the monitor in future.

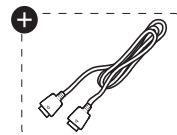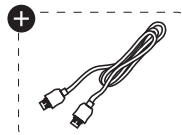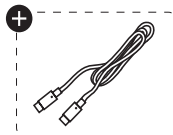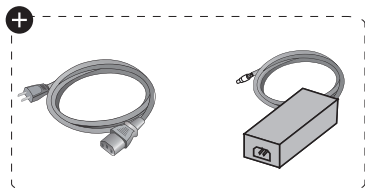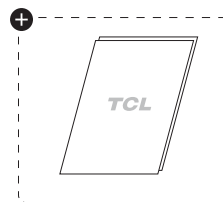


 Accessories may vary by country.

Installing the Monitor


Setup stand & base

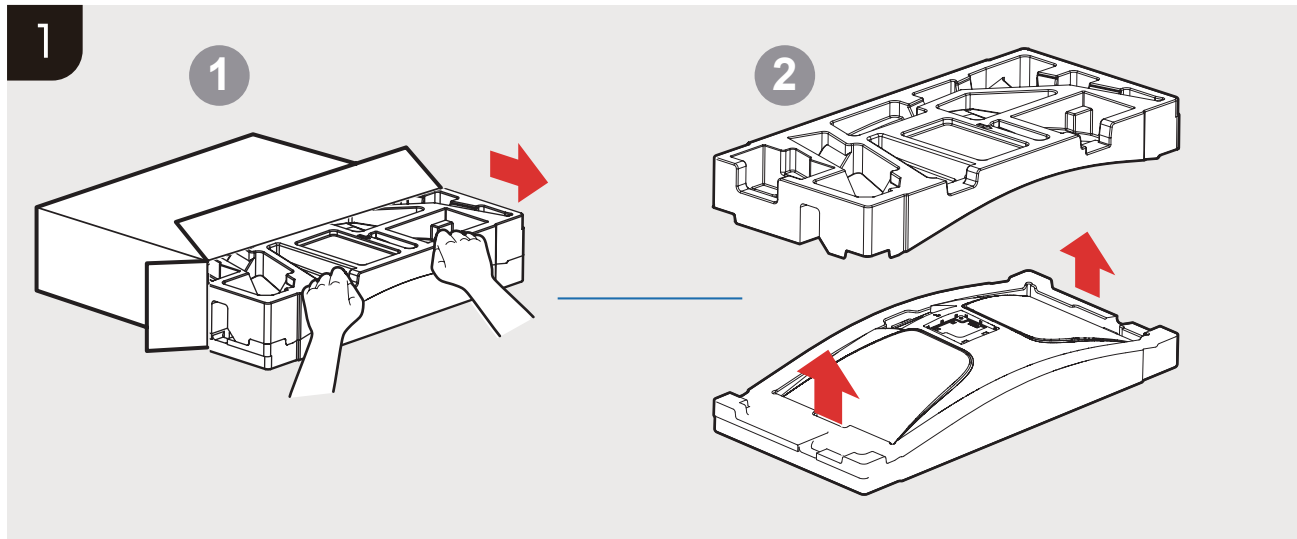



Setup stand & base

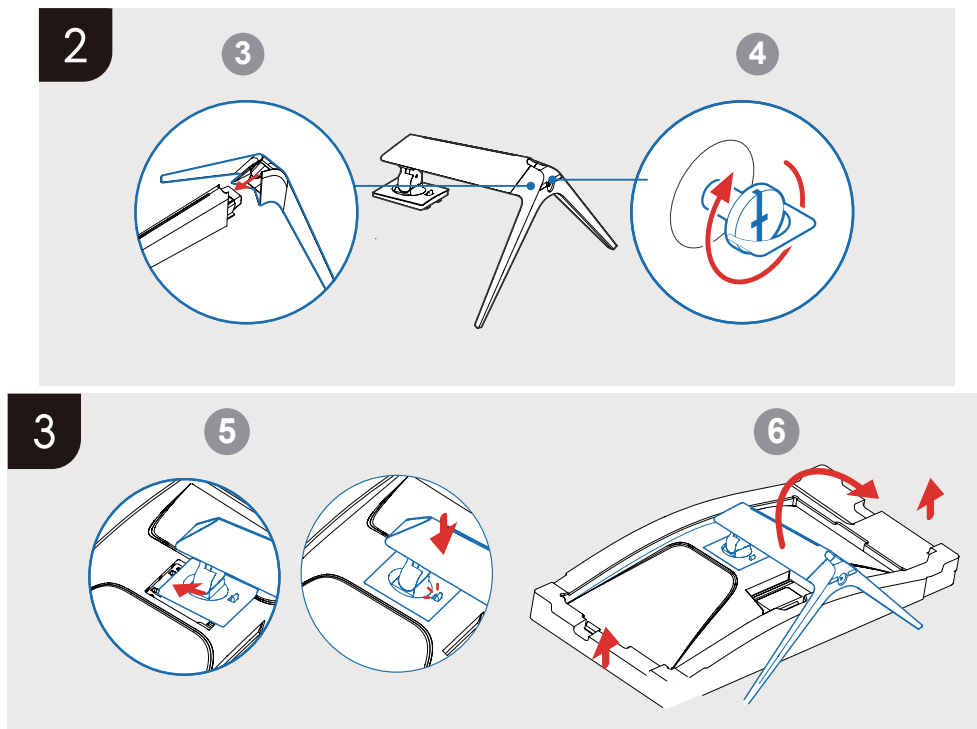


Connect to the power and turn on monitor

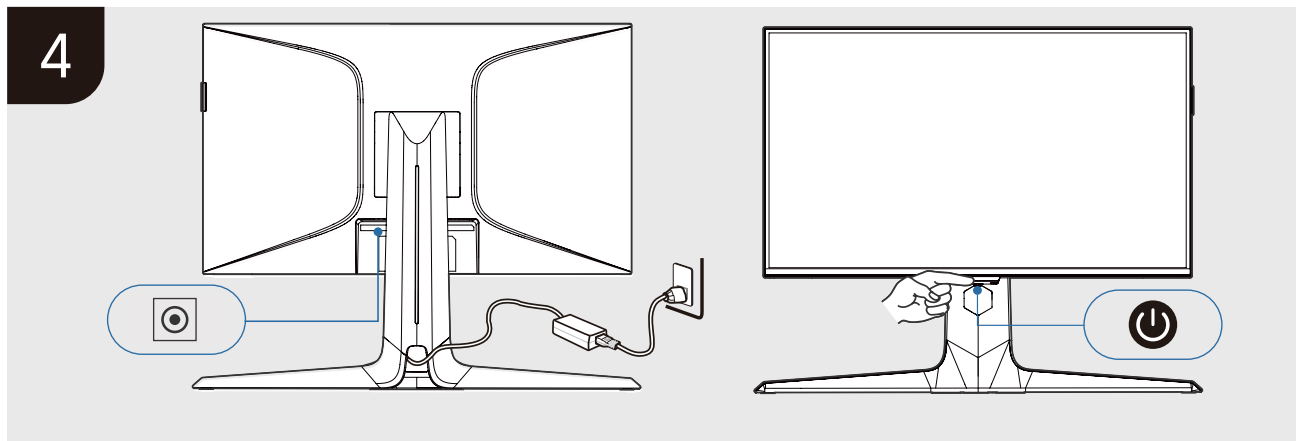

Adjusting viewing angle

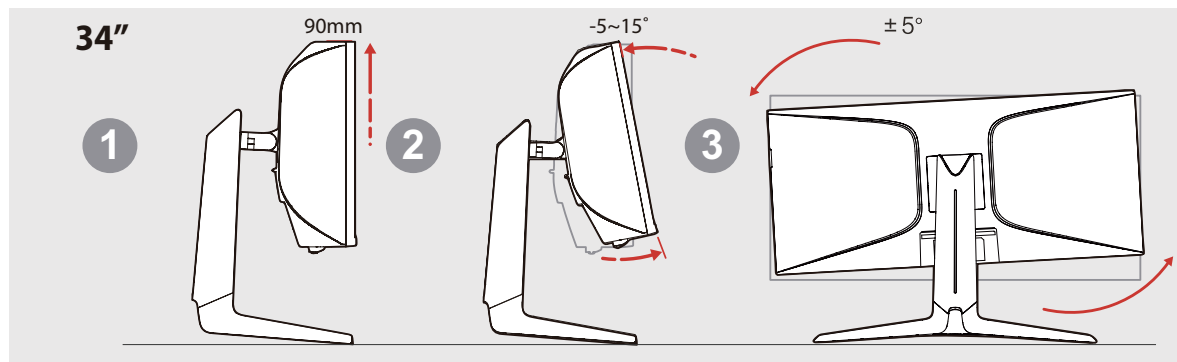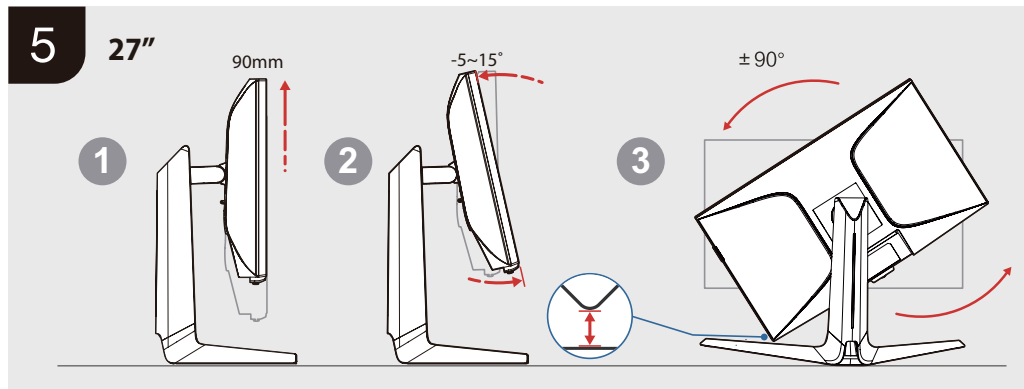

Adjusting viewing angle

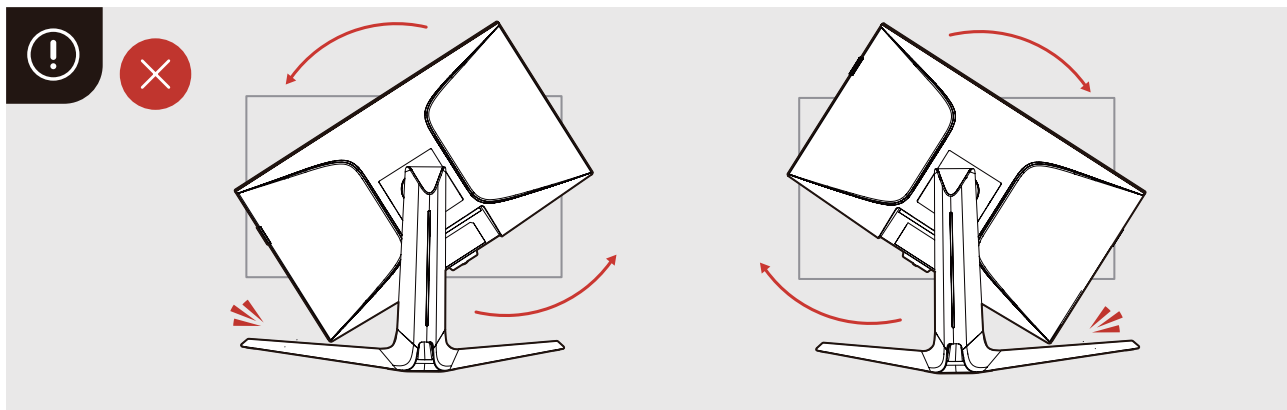

Wall mounting

Warning





Never place a monitor set in an unstable location. A monitor set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Check that the wall can support the weight of the monitor and wall mount assembly.
- Follow the mounting instructions provided with the wall mount. For certain models, make sure to screw the VESA wall mounting screw bosses (and screws) provided with the set into the nuts for the wall mount at the back of your set before your wall mounting.
- If the screws missing by personal accident, ensuring to use only screws recommended in wall mounting part of the User Manual or Quick Start Guide(attach in accessory box) and suitable for the material of the wall.
- Only using furniture that can safely support the monitor set recommended in wall mounting part of the User Manual or Quick Start Guide(attach in accessory box).
- Ensuring that the monitor must be installed on a vertical wall.
- Ensuring the monitor is not overhanging the edge of the supporting furniture.
- Not placing the monitor on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the monitor set to a suitable support.
- Not place the monitor set on cloth or other materials that may be located between the monitor set and supporting furniture.
- ALWAYS route the cords and cables connected to your monitor so that there is no danger of tripping.

Note: All other safety instructions about our monitor are also applicable here. If your existing monitor set is being retained and relocated, the same considerations as above should be applied.

Wall mounting

Wall mounting

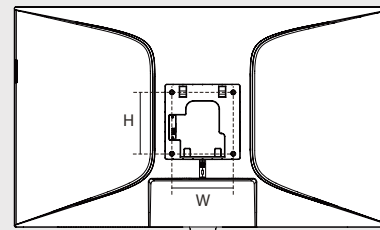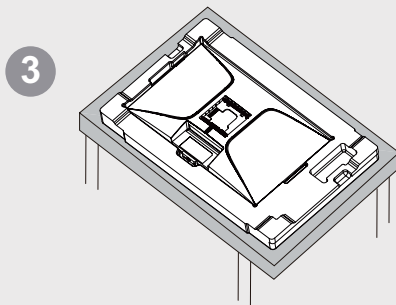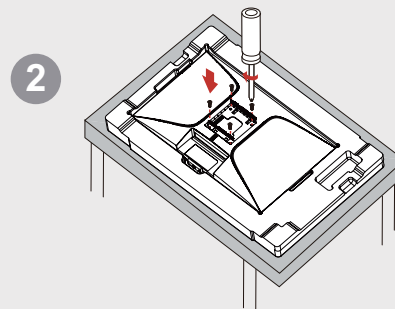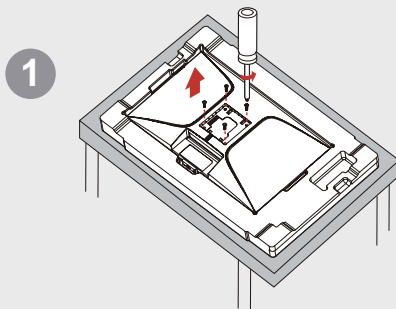


	W	H	VESA Screws	Torque
27/34"	100mm	100mm	M4x8mm~4pcs	< 1.2N.m

Using the Monitor

Connections

Connect to the monitor

1. Before connecting to the monitor ensure that your computer/laptop on the state of turning off
2. Connect the monitor cable to the right plot of your computer/laptop.
3. Connect one end of the power cord with the AC Input.
4. Connect the other end to your computer/laptop.
5. Plug the power cord to an electrical outlet.
6. Press the middle of the joystick button to turn on the monitor.
7. Monitor will identify signal and show picture after you turning on the computer/laptop.


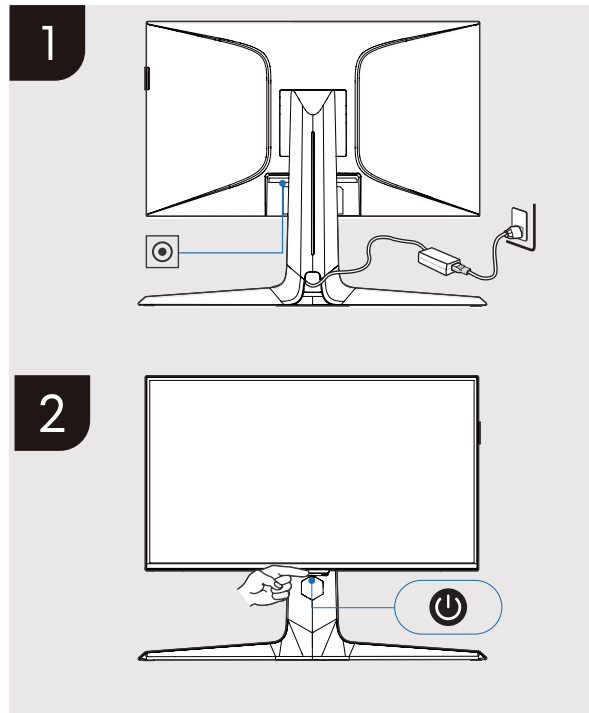


Connections

Monitor Terminal Description

Note: Button and connector locations may vary according to monitor model.

 19V	Monitor power input socket
UPSTREAM	A port that can upload data from USB-B to your computer/laptop
 5V $\equiv$ 0.9A	Universal Serial Bus(USB) interface
HDMI™	HDMI signal access port
DP	Display Port. DP signal access port
TYPE-C (Max 90W)	Type-C input interface (Type-C output: 5VDC/3A, 9VDC/3A, 12VDC/3A, 15VDC/3A, 20VDC/3A)
Headphone	Audio output socket

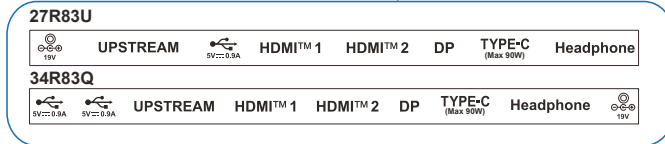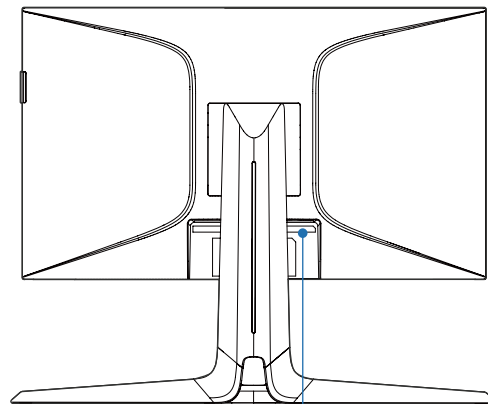


Joystick Button

Function description

Here are the navigation direction buttons and the Power button on the bottom of the monitor that you may use frequently.


	Instruction
Turn On	Short press the middle of the button.
Turn Off	Long press the middle of the button for 3 seconds.
Indicator Light	Light's off when turning off the monitor
	Light turns orange when monitor on standby state
	Light turns white when there is no input signal to monitor
	Light goes out when there is input signal to monitor

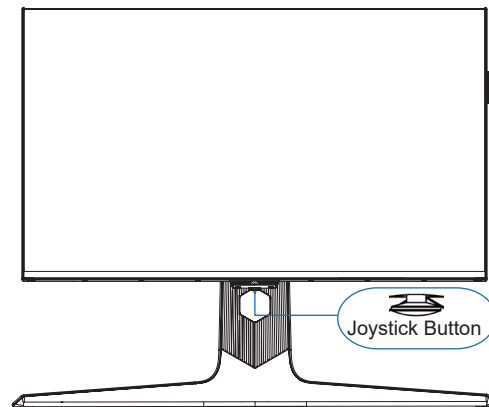


Function description

Middle key (Press the middle of joystick button)	- You can turn on/off the monitor. - When the monitor on the state of ON : short press to navigation menu.
Left key (Toggle joystick button to left direction)	- When the monitor on the state of ON: short press to navigation menu. - When open navigation menu, toggle left you can BACK to previous step or CLOSE navigation menu.
Right key (Toggle joystick button to right direction)	- When the monitor on the state of ON : short press to navigation menu. - When open navigation menu, toggle right you can go to Display option or CONFIRM to go to next step (default setting, where you can change it following instruction of OSD Function Menu).
Up key (Toggle joystick button to the back front of monitor)	- When the monitor on the state of ON : short press to navigation menu. - When open navigation menu, toggle to the direction of screen side, you can go to Input option (default setting, where you can change it following instruction of OSD Function Menu)
Down key (Toggle joystick button to the screen side of the monitor)	- When the monitor on the state of ON : short press to navigation menu. - Toggle to the direction of screen side of monitor, you can CLOSE navigation menu.

NOTE: Do not press the joystick bottom directly against the desktop, as it is easy to cause damage.

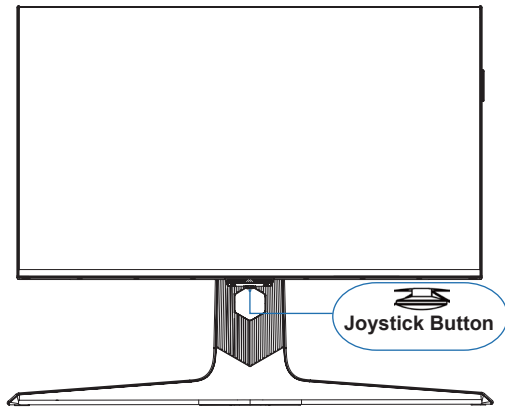

On the state of ON, you can toggle every direction to open navigation menu, and follow the instruction to adjust.

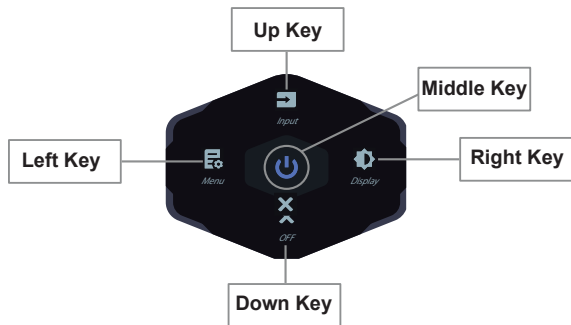

OSD function menu

Game mode

This section describes how to optimise the screen display better for playing games.

Step 1	Step 2	Step 3	Step 4	Step 5	Step 6
FreeSync Premium	• Press joystick button	• Select Menu	• Select Game Mode	• Select FreeSync Premium • Toggle • Press Power / > to enter	• Turning on: 
					• Turning off: 
Dark Part Brightening	• Press joystick button	• Select Menu	• Select Game Mode	• Select Dark Part Brightening • Toggle • Press Power / > to enter	• Toggle ^ / v to increase or decrease
Response Time	• Press joystick button	• Select Menu	• Select Game Mode	• Select Response Time • Toggle • Press Power / > to enter	• Toggle ^ / v • To set Normal, Fast or Fastest • Press < to confirm
Crosshair	• Press joystick button	• Select Menu	• Select Game Mode	• Select Crosshair • Toggle • Press Power / > to enter	• Toggle ^ / v • To set    or OFF
Timer	• Press joystick button	• Select Menu	• Select Game Mode	• Select Timer • Toggle • Press Power / > to enter	• Toggle ^ / v • To set 15/30/45/60/90/120 Minutes or OFF
Ambient Light	• Press joystick button	• Select Menu	• Select Game Mode	• Select Ambient Light • Toggle • Press Power / > to enter	• Toggle ^ / v • To set Static Red, Static Blue, Breathing light, Dazzling lights, Running light or OFF
Refresh Rate	• Press joystick button	• Select Menu	• Select Game Mode	• Select Refresh Rate • Toggle • Press Power / > to enter	• Turning on: 
					• Turning off: 

Press < to return to the previous menu.

Setting may vary to different monitors.

OSD function menu

Display

This section allows you to adjust basic settings or more options of picture.

Adjustment/ Setting	Specification	Instuction	Step 1	Step 2	Step 3	Step 4
Local Dimming	Automatically adjust backlight and contrast based on individual areas of the screen to optimise picture performance.		- Press joystick button - Select Menu	- Select Display - Press Power / > to enter	- Select Local Dimming - Press Power / >	To set as High, Medium, Standard or OFF
Brightness	Adjust the luminance level from 0 to 100 of screen.		- Press joystick button - Select Menu	Select Brightness	Press ^ / v to increase or decrease	/
Contrast	Adjust the white level from 0 to 100 of picture.		- Press joystick button - Select Menu	- Select Display - Press Power / > to enter	- Select Contrast - Press ^ / v to increase or decrease	/
Gamma	Adjust the medium brightness of picture. The smaller the number is, the brighter the picture is.		- Press joystick button - Select Menu	- Select Display - Press Power / > to enter	Select Gamma	Press Power to set Gamma1 or Gamma2 to correct picture
Aspect	Adjust the size of the screen picture.		- Press joystick button - Select Menu	- Select Display - Press Power / > to enter	- Select Local Dimming - Press Power / >	Press Power to set Auto/ 21:9/ 4:3
DCR	Dynamic Contrast Ratio. Automatically adjust brightness, contrast and color, it can make the details of the picture sharper and distinct.		- Press joystick button - Select Menu	- Select Display - Press Power / > to enter	- Select DCR - Press Power / > to enter	- Turning on:  - Turning off: 
Sharpness	Adjust the level of the picture detail within range 0 to 10.		- Press joystick button - Select Menu	- Select Display - Press Power / > to enter	- Select Sharpness - Press Power / >	Toggle joystick button to adjust level 0~10

Press **<** to return to the previous menu.

Setting may vary to different monitors.

OSD function menu

Color

This section allows you to adjust basic settings or more options of picture.

Setting	Step 1	Step 2	Step 3	Step 4	Step 5
Color	Press joystick button	Select Menu	- Select Color - Press Power / > to enter	- Press ^ / v - To set as Standard, Warm, Cool or User	Press Power / > to confirm

Press < to return to the previous menu.

Input

This section allows you to select input sources.

Setting	Step 1	Step 2	Step 3	Step 4	Step 5
HDMI1	Press joystick button	Select Menu	- Select Input - Toggle joystick button to select HDMI1	Press Power / > to confirm	/
HDMI2	Press joystick button	Select Menu	- Select Input - Toggle joystick button to select HDMI2	Press Power / > to confirm	/
DP	Press joystick button	Select Menu	- Select Input - Toggle joystick button to select DP	Press Power / > to confirm	/
TYPE-C	Press joystick button	Select Menu	- Select Input - Toggle joystick button to select TYPE-C	Press Power / > to confirm	/
Automatic input	Press joystick button	Select Menu	- Select Input - Toggle joystick button to select Automatic input	Press Power / > to turn on/off	Turning on: 
					Turning off: 

Press < to return to the previous menu.

Setting may vary to different monitors.

OSD function menu

Input

This section allows you to select input sources.

Setting	Option	Specification	Step 1	Step 2	Step 3	Step 4
PIP/PBP	PIP	Split a smaller scope of the window on the top right corner of the screen.	- Press joystick button - Select Menu	- Select Input - Toggle joystick button to select PIP	- Press joystick button - Press to select Source / PIP Size/ Location/ Display Switch/ Audio Switch	Source: - Press joystick button - Press to select HDM1/ HDM2/ DP/ TYPE-C
						PIP Size: - Press joystick button - Press to select Small/ Medium/ Large
						Location: - Press joystick button - Press to select Left Top/ Right Top/ Left Bottom/ Right Bottom
						Display Switch: - Press joystick button - Toggle and press joystick bottom to confirm
						Audio Switch: - Press joystick button - Toggle and press joystick bottom to confirm

Press ◀ to return to the previous menu.

Setting may vary to different monitors.

OSD function menu

Input

This section allows you to select input sources.

Setting	Option	Specification	Step 1	Step 2	Step 3	Step 4
PIP/PBP	PBP	Split the screen	- Press joystick button - Select Menu	- Select Input - Toggle joystick button to select PBP	- Press joystick button - Press to select Source/ Display Switch/ Audio Switch	Source: - Press joystick button - Press to select HDM1/ HDM2/ DP/ TYPE-C Display Switch: - Press joystick button - Toggle and press joystick button to confirm Audio Switch: - Press joystick button - Toggle and press joystick button to confirm
	Phone mode	Split quarter of the screen where displays the picture of the connected phone	- Press joystick button - Select Menu	- Select Input - Toggle joystick button to select Phone mode	Press joystick button	Press to select Audio Switch
	OFF	Reset to the standard mode of the screen	- Press joystick button - Select Menu	- Select Input - Toggle joystick button to select OFF	/	/

Press < to return to the previous menu.

Setting may vary to different monitors.

OSD function menu

Scenario mode

This section allows you to select picture modes.

Setting	Step 1	Step 2	Step 3	Step 4	Step 5
Scenario Mode	· Press joystick button	· Select Menu	· Select Scenario Mode · Press Power / > to enter	· Press ^ / v	· Press Power / > to confirm

Press < to return to the previous menu.

Option	Specification
Standard	Power saving mode, recommended for daily use.
Office	Suitable for working, eye-friendly option.
DCI-P3	Attach importance to visual impact with broader range of red/ green color gamut.
SRGB	Common color standard for windows and most browsers.
Adobe RGB	Higher color rendition of green color and broader color gamut than SRGB
FPS	The ideal color settings for first perspective shooting games' player.
RPG	The ideal color settings for first role-playing games' player.
RCG	The ideal color settings
Movie	Better for enjoying movies
Eye Saver	It reduces the amount of blue light emitted by the screen, which can reduce the visual fatigue associated with screen viewing.
E-book mode	It reduces the amount of blue light by the screen, which only display black and white color of screen.

Setting may vary to different monitors.

Specification

General Specification

Model	27R834U	34R83Q
Product Type	Mini LED Gaming Monitor	Mini LED Gaming Monitor
Panel Active Size(Inch)	27	34
Visual Range(mm)	596.736(H)×335.664(V)	797.22(H)×333.72(V)
Pixel Pitch(mm)	0.0518(H)×0.1554(V)	0.07725(H)×0.23175(V)
Color	1.07G (8 bit + FRC)	1.07G (8 bit +FRC)
Display Resolution	3840×2160@ 160Hz (DP/TYPE-C)	3440×1440@ 170Hz (DP/TYPE-C)
Refresh Rate	3840×2160@ 144Hz (HDMI)	3440×1440@ 100Hz (HDMI)
Local Dimming Zone	Mini Led 1152 Zone	
Power Range (Input Voltage Current)	100-240V~50/60	
Adapter Out (Voltage Current)	19V --- 13.69A	

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Specification

General Specification

Model	27R83U	34R83Q
Terminals	HDMI, DP, TYPE-C, USB-A, USB-B, Headphone (The exact number of terminals are based on the actual product.)	
Power Consumption (Sleep/Off)	0.5W	0.5W
Product Size	Width (active area): 613mm Height (active area): 359mm Total Height (with stand&base): 524mm	Width (active area): 807mm Height (active area): 360mm Total Height (with stand&base): 517mm
Tile Angle	5~15°(typical)	5~15°(typical)
Pivot	Left&Right Angle $\pm 90^{\circ}$	Left&Right Angle $\pm 5^{\circ}$
Swivel	Left&Right Angle $\pm 20^{\circ}$	Left&Right Angle $\pm 20^{\circ}$
Operating Temperature	0~35°C(32°~95°F)	
Operating Humidity	20~85%	

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Specification

Standard Signal Mode

27R83U

HDMI	640×480 (60/72/75Hz)	720×400 (70Hz)	720×480 (60Hz)	800×600 (60/72/75Hz)	1024×768 (60/70/75Hz)	1280×720 (50/60Hz)	1280×1024 (60/75Hz)
	1440×900 (60/120Hz)	1680×1050 (60/120Hz)	1600×900 (60/120Hz)	1920×1080 (50/60/120Hz)	2560×1440 (60/120/144Hz)	3840×2160 (30/60/120/ 144Hz)	/

DP&TYPE-C	640×480 (60/72/75Hz)	720×400 (70Hz)	720×480 (60Hz)	800×600 (60/72/75Hz)	1024×768 (60/70/75Hz)	1280×720 (50/60Hz)	1280×1024 (60/75Hz)
	1440×900 (60/120Hz)	1680×1050 (60/120Hz)	1600×900 (60/120Hz)	1920×1080 (50/60/120Hz)	2560×1440 (60/120/144Hz)	3840×2160 (60/120/144/ 160Hz)	/

The above function may be adjusted due to different models or software version upgrades, subject to the actual models.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Specification

Standard Signal Mode

34R83Q

HDMI	640×480 (60/72/75Hz)	720×400 (70Hz)	720×480 (60Hz)	800×600 (60/72/75Hz)	1024×768 (60/70/75Hz)	1280×720 (50/60Hz)	1280×1024 (60/75Hz)
	1440×900 (60/120Hz)	1680×1050 (60/120Hz)	1920×1080 (50/60/120Hz)	2560×1440 (60/120Hz)	3440×1440 (50/60/100Hz)	3440×1440 (30/60Hz)	/

DP&TYPE-C	640×480 (60/72/75Hz)	720×400 (70Hz)	720×480 (60Hz)	800×600 (60/72/75Hz)	1024×768 (60/70/75Hz)	1280×720 (50/60Hz)	1280×1024 (60/75/120Hz)
	1440×900 (60/120Hz)	1680×1050 (60/120Hz)	1920×1080 (60/120Hz)	2560×1440 (60/120Hz)	3440×1440 (50/60/100/ 144/165/170Hz)	3840×2160 (30/60Hz)	/

The above function may be adjust due to different models or software version upgrades, subject to the actual models.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Other Information

Troubleshooting

Please check the following list before requesting service.

The power indicator is off:

- Make sure the power cord is properly inserted in the power outlet and power socket on monitor.
- Make sure the power button is pressed properly to switch the monitor on.

Plug and play does not work:

- Make sure your PC is properly matched.
- Make sure your graphic card is properly matched.

Picture is too dark, too light or tinted:

- Check the colour adjustment.
- Check the brightness setting.
- Check the sharpness function.

Screen flickers or ripples on the picture:

- Consider whether your monitor is interfered by electrical equipment.

No picture appears when the power indicator is on:

- Make sure the computer power is turned on.
- Make sure the graphic card is properly inserted.
- Consider whether the computer is running by pressing the CapsLock button of PC keyboard and observing the indicator.

The colour or sound is abnormal:

- Reset colour or sound to factory default settings in setting.

Note: *If the above suggestions do not solve your technical issue, please refer to the warranty card for service information.*

Legal Statement

Due to the various capabilities of products featuring the monitor - Services, as well as limitations in the available content, certain features, applications, and services may not be available on all devices or in all territories. Some features on monitor may also require additional peripheral devices or membership fees that are sold separately. Please visit our website for more information on specific device information and content availability. The services and availability of content through monitor are subject to change from time to time without prior notice.

All content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

Third party services may be changed, suspended, removed, terminated or interrupted, or access may be disabled at any time, without notice, and TCL makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which TCL has no control.

Without limiting the generality of this disclaimer, TCL expressly disclaims any responsibility or liability for any change, interruption, disabling, removal or suspension of any content or service made available through this device. TCL may impose limits on the use of or access to certain services or content, in any case and without notice or liability. TCL is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE DEVICE IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE AND ACCURACY IS WITH YOU. THE DEVICE AND ALL THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED. TCL EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE DEVICE AND ANY CONTENT AND SERVICES, EITHER EXPRESS OR, IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, OF SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TCL DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND DOES NOT WARRANT THAT THE DEVICE, CONTENT OR SERVICES WILL MEET YOUR REQUIREMENTS, OR THAT OPERATION OF THE DEVICE OR SERVICES WILL BE UNINTERRUPTED OR ERROR-FREE. UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL TCL BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF THE DEVICE, OR ANY CONTENT OR SERVICE ACCESSED BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.